

Choose a mounting location suitable to support the full weight of the system when operating

Use 3/8" water line

Connect the system to the boiler water only! Do not connect to the condenser!

Install vertically with cartridges hanging down

Allow 2-1/2" clearance below the cartridge for easy cartridge replacement

Flush cartridges by running water through filter for five minutes at full flow

Change 4CB5 cartridge on a regular 6 month preventative maintenance program

Change SS-10 cartridge before Hydroblend^{\mbox{\tiny TM}} compound is completely used up

Change cartridges when capacity is reached or when pressure falls below 10 psi

Service flow rate must not exceed 1.67 gpm

Always flush the filter cartridge at time of installation and cartridge change

For commercial steam applications

For use with countertop steamers

## Kleensteam CT

## S P E C I F I C A T I O N S

Overall Dimensions: 18.75"H x 15"W x 7"D

Inlet connection: 3/8"

Outlet connection: 3/8"

Service Flow Rate: Maximum 1.67 gpm (6.3 Lpm)

Pressure Requirements: 10 psi -125 psi (0.7 – 8.6 bar), non-shock

Maximum water temperature at inlet: 80°F (27°C)


Alkalinity range: 2 to 12 grains per gallon

No electrical connection required

Shipping Weight: 15 lbs.

Operating Weight: 18 lbs.

The contaminants or other substances removed or reduced by this drinking water system are not necessarily in your water. Do not use with water that is microbiologically unsafe or of unknown quality without adequate disinfection before or after the system. Systems certified for cyst reduction may be used with disinfected water that may contain filterable cysts.

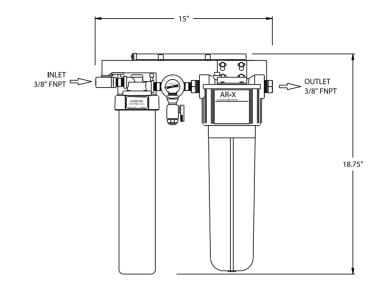

## WARRANTY

Everpure water treatment systems (excluding replaceable elements) are covered by a limited warranty against defects in material and workmanship for a period of five years after date of purchase. Everpure replaceable elements (filter cartridges and water treatment cartridges) are covered by a limited warranty against defects in material and workmanship for a period of one year after date of purchase. See printed warranty for details. Everpure will provide a copy of the warranty upon request.



EVERPURE, LLC 1040 Muirfield Drive Hanover Park, Illinois 60133 Toll Free (800) 323-7873 Tel (630) 307-3000 Fax (630) 307-3030 http://www.everpure.com In Europe: N.V. EVERPURE (EUROPE) S.A. Industriepark Wolfstee Toekomstlaan 30 B-2200 Herentals Belgium Tel 32 -14-283500 Fax 32-14-283505

## In Japan: EVERPURE JAPAN LLC Hashimoto MN Bldg. 7F 3-25-1 Hashimoto Sagamihara-Shi Kanagawa 229-1103 Japan Tel 81-(0)42-775-3011 Fax 81-(0)42-775-3015

Everpure, LLC 1040 Muirfield Drive Hanover Park, IL 60133 Ph: 630-307-3000 Fax: 630-307-3030