

# NEW PRODUCT INTRODUCTION

## Sani-Safe® Stainless Steel Mesh Gloves

Specially designed for use with Dexter-Russell's famous Ultimate Edges. Sani-Safe stainless steel mesh gloves are constructed with stainless steel wire; with each individually welded ring woven around at least 4 adjoining rings, providing ultimate cut/puncture protection and unsurpassed strength. The taper fit conforms to the hand and the nylon cinch strap keeps the glove secure, thus decreasing fatigue and increasing productivity.

### Features:

Cut and puncture resistant

Each stainless steel ring is manufactured with heavy duty wire and is individually welded for unsurpassed strength and durability


Taper fit conforms to the hand to reduce fatigue

Each ring is attached to at least 4 adjoining rings providing strong seams and maximum puncture protection

Easy to maintain stainless steel material has excellent resistance to bacteria, oils, and fats

Reversible snap-fastener changes easily to fit on either left or right hand

Colored nylon cinch strap keeps glove secure and indicates size

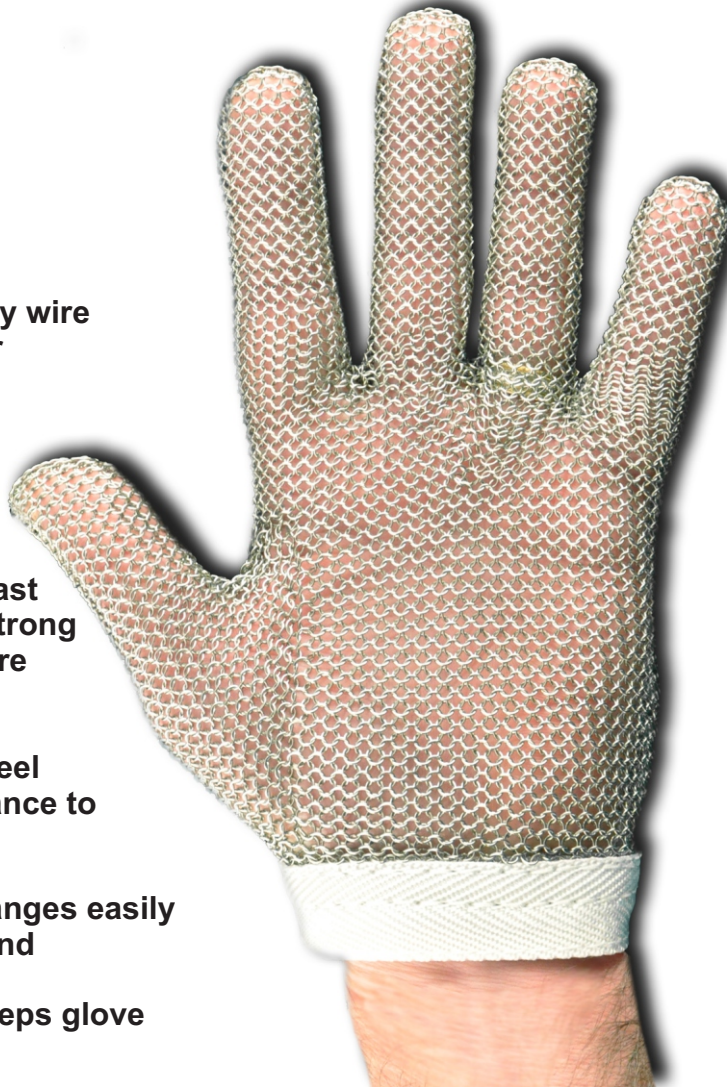

Reversible design  
fits right or left hand

*Turn to the experts  
in the ultimate sharp edge  
for complete hand protection!*

Dexter-Russell, Inc., 44 River Street, Southbridge, MA 01550 U.S.A. • 800-343-6042  
www.dexter1818.com • www.facebook.com/DexterPROTOUR

© 01/2014 Dexter-Russell, Inc.

THE EDGE SINCE 1818

DEXTER  
RUSSELL  
®

# EXCITING NEW PRODUCTS

**Strong**  
**Flexible**  
**Hygienic**

**DEXTER**  
THE EDGE SINCE 1818®

## **Sani-Safe®** **Stainless Steel** **Mesh Gloves**

**An Excellent Choice For Foodservice  
Processing, And Industrial Applications**



**Reversible design  
fits right or left hand**

<u>Item No.</u>	<u>Product No.</u>	
82043	SSG2-S	small
82143	SSG2-S-PCP	small
82053	SSG2-M	medium
82153	SSG2-M-PCP	medium
82063	SSG2-L	large
82163	SSG2-L-PCP	large
82073	SSG2-X	x-large
82173	SSG2-X-PCP	x-large

(One glove per package)

PCP designates Perfect Cutlery Packaging

### Colored Wristband Size Indicator

Small	White
Medium	Red
Large	Blue
X-Large	Orange

### **Use and Care Instructions**

Dexter stainless steel gloves must be cleaned after each use and can withstand temperatures up to 265°F. Clean with warm water with standard cleaning agents. Brush and rinse gloves vigorously in the process. Harsh cleansers may reduce the serviceability of mesh gloves and should be avoided. Do not allow gloves to strike a hard surface as this could bend, nick, or wear down the mesh.

**DEXTER**  
THE EDGE SINCE 1818®

Dexter-Russell, Inc., 44 River Street, Southbridge, MA 01550 U.S.A. • 800-343-6042  
www.dexter1818.com • www.facebook.com/DexterPROTOUR